


Torque Converter Clutch Pulse Width Modulation (TCC PWM) Solenoid Replacement

Replacement Procedure

Important

Retainer clips hold in each of the valve line-ups. Use a small screwdriver in order to remove the retainer clips. Be careful not to score the valve body when removing the retainer clips and valves. Before removing the valve line-ups, inspect each valve line-up for freedom of movement.

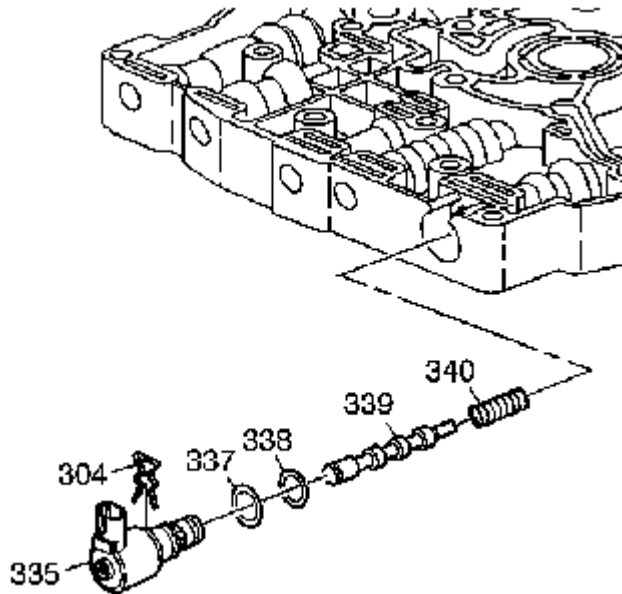

1. Remove the transmission side cover.
2. Remove the TCC solenoid retainer clip (304), the TCC solenoid (335), with two O-rings (337, 338), and screen, the TCC regulated apply valve (339) and the spring (340).

Installation Procedure

1. Install the spring (340), the TCC regulated apply valve (339), the TCC solenoid (335) with two O-rings (337 and 338) and screen, and the TCC solenoid retainer clip (304).
2. Install the transmission side cover.

So you know GM holds the copyright. I make no guarantee about the accuracy of this guide. I also take no responsibility for what you do with it or any damage that may be caused using the information contained here in. In other words, use this guide at your own risk!

-DarkKnight

Domesticcrew.com